



## **CARE AND MAINTENANCE**

### **Before Writing on Dry Erase Surface**

Before initial use of the writing surface, the material must be cleaned with Expo Cleaner and a soft cloth, and then towel dried. Follow with clean water and a soft cloth. Use another clean towel to dry.

### **Markers**

We recommend the use of Expo Bold Color markers.

### **Daily Cleaning**

Micro-fiber Cloths are recommended as erasers to remove the dry erase markings. Change or clean the cloth often, as they become soiled to avoid leaving excessive marker residue on the surface. Micro-fiber Cloths can be washed. For cleaning marker residue build-up, use Expo brand dry erase cleaning solution and a soft towel.

### **Long Term Care**

Clean the entire surface on a regular basis to insure the ultimate performance and appearance of the product over the long term.

**Do not use abrasive cleaners/cleaning tools, erasers with hard plastic edges/housing or pointed writing instruments on the dry erase surface.**