



Woodwerx

CASK WALL PANEL INSTALLATION INSTRUCTIONS

PRECAUTIONS



Always wear work gloves, safety glasses and mask when cutting this product.

By installing this product, you confirm that you have consulted the installation instructions and acknowledge your approval of the product and its warranty.

TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft²)
- Caulking gun
- Miter saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer
- #23 gauge finish nails
- Stepladder

WALL PANELS MUST BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING.

CEILING APPLICATIONS:

Special glues must be specified by the onsite engineer or architect with the use of #18 gauge nails and installed by a licensed contractor or carpenter. Structural weight limitations need to be considered.


Ceiling applications are not covered by the warranty.

Do not install over material other than drywall or plywood.

MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.


FIRST, check that the wall is level from floor to ceiling and edge to edge. If not, adjust accordingly.

STEP 1: Cut the excess wood to be straight with the backing.

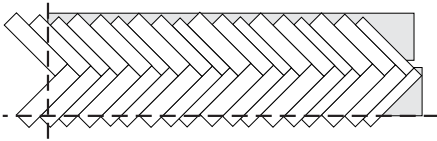


STEP 2:

A Apply a line of 100% polyurethane glue (1/2" from the edge) and an X inside the rectangle on the back of the wall panel.

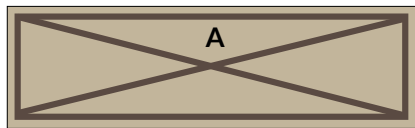


B Apply glue on the exposed backing at the edge.

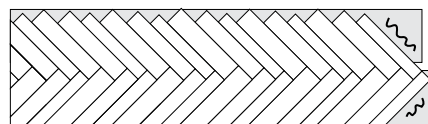

STEP 3:

Position the first panel vertically at the bottom right. Make sure each panel and each column is level.

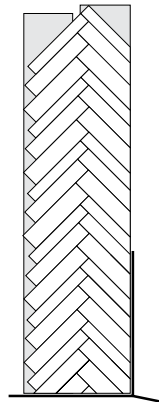

STEP 4:

Nail the panel in place with #23 gauge finish nails on the exposed backing and on the right at an angle between wood slats. NEVER NAIL DIRECTLY TO THE FACE OF THE WOOD SLATS.



STEP 5:

Installation of subsequent panels

- Cut the protruding tabs on the right.
- Repeat Step 2.
- Align panel **B** against panel **A**.
- Repeat Step 4.

STEP 6:


End a column

Cut any excess of the wall panel flush with the top of the wall.

STEP 7:

Start a new column

Use the remaining piece matching the pattern of the previous column. Repeat Step 2 and apply glue on the corresponding backing of the adjacent wall panel.

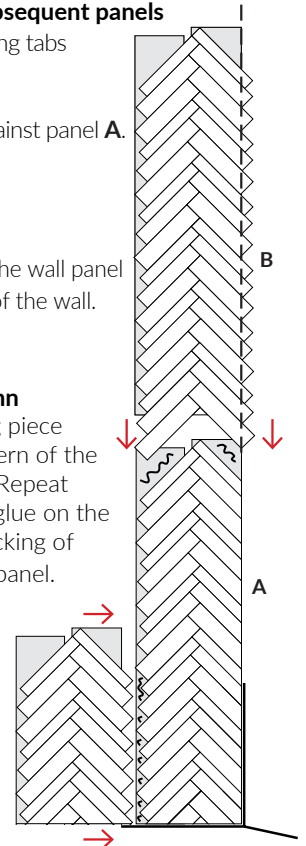

STEP 8: Last column

Cut the panel on the left to fit the available space.

NOTE: A detached wood slat can be reglued using the same glue as for the installation.

Manufacturer guarantees the conformity of its products when they are installed according to the installation instructions and maintained in an environment where the ambient humidity ranges between 35% and 55%. Failure to comply with the installation instructions shall void the application of the Warranty.

PRIOR TO INSTALLATION, PLACE CARTONS IN THEIR ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.



OdysseyWallcoverings.com

