

## MADERA WALL PANEL

### PRECAUTIONS

Always wear work gloves and safety glasses when cutting the product.



## INSTALLATION INSTRUCTIONS

- Each box contains 4 wall panels and 16 wood slats


### Tools:

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup> or 10 m<sup>2</sup>)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish hammer (#23 gauge finish nail)
- Stepladder


### MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN PRIME CONDITION.

First, check the wall(s) is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.


**STEP 1 :** Cut the excess of the plywood on the left side.

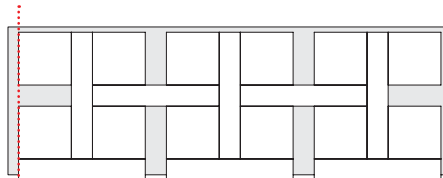

**STEP 2:** Apply a line of 100% polyurethane glue in the form of a rectangle (1/2" (1.3 cm) from edges) and an X inside the rectangle.

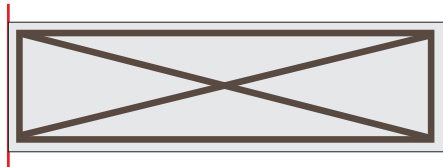


**STEP 3 :** Starting from the bottom left, place the wall panel horizontally, the cut side to the left. Make sure each wall panel and row are level.

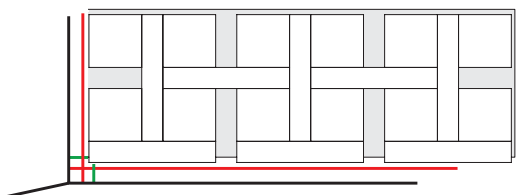

Manufacturer guarantees the conformity of its products when they are installed according to the installation instructions and are maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

**LEAVE THE BOX FLAT ON THE FLOOR IN ITS ORIGINAL WRAPPING AND IN THE ROOM IT IS TO BE INSTALLED UNTIL INSTALLATION.**

**STEP 4 :** Nail the panel in place with #23 gauge finish nails on the contour lips and within the empty spaces. NEVER NAIL DIRECTLY ON THE FACE OF THE WALL PANEL.

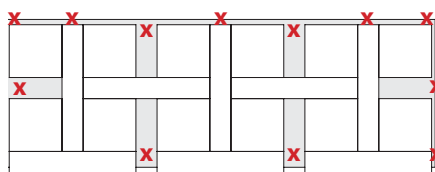


### STEP 5 : Installation of subsequent panels and wood slats

**A** Glue and nail in place a wood slat on the right hand side of the installed panel.

**B** Second panel to install ; repeat step 2 and slide under the wood slat against the first panel.

**C** Repeat step 4.

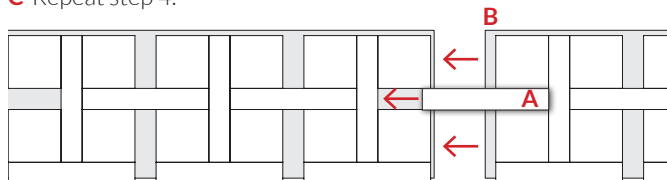

### STEP 6 : End a row

- At the end of a row, glue the wood slats on the top of the panels where they are intended.
- For the bottom and each end, the wood slats must be cut and then glued in place.

### STEP 7 : Start a new row

- To start a new row, repeat step 1 or use the remaining pieces, making sure to respect the pattern from the previous row.

### STEP 8 : Last row

Cut the panels of the last row lengthwise to fit the given space.

**NOTE :** If wood pieces detach from a wall panel, reposition using 100% polyurethane glue.

THE WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALL AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS SHALL VOID THE APPLICATION OF THE WARRANTY.

Do not install over material other than drywall and plywood.