



Woodwerx

Technical specifications

	Atelier Collection				
Colors	Dolce	Madrid	Tessere	Paragon	Marquis
Wood species	White oak or torrefied poplar	White oak or torrefied poplar	White oak or walnut	White oak or torrefied poplar	White oak
Width	16"	16"	13.44"	14"	14"
Length	60"	56"	53.75"	48.5"	48.5"
Thickness variations including the backing	9 and 14mm	9 and 14mm	21mm	9.5mm and 12mm	9.5mm and 12mm
Backing	Birch plywood 6mm <i>TSCA Title VI and Carb Compliant</i>	Birch plywood 6mm <i>TSCA Title VI and Carb Compliant</i>	Birch plywood 12mm <i>TSCA Title VI and Carb Compliant</i>	Birch plywood 6mm <i>TSCA Title VI and Carb Compliant</i>	Birch plywood 6mm <i>TSCA Title VI and Carb Compliant</i>
Coating	100% natural oil				
VOC	VOC-free				
Covered area by panel	6.7 sq ft	6.2 sq.ft.	5 sq ft	4.7 sq ft	4.7 sq ft
Weight of panel	10 lbs	9.5 lbs	12 lbs	9 lbs	9 lbs

Accessories	Corner trim 0.75" x 0.75" x 90" White oak: Modish Antiqued w/o Poplar: no matching trim	Corner trim 0.75" x 0.75" x 90" White oak: Modish Antiqued w/o Poplar: no matching trim	corner trim 1.325" x 0.79" x 90"	Corner trim 0.75" x 0.75" x 90" White oak: Modish Antiqued w/o Poplar: no matching trim	Corner trim 0.75" x 0.75" x 90" White oak: Wildwood Elevation
Hardwood sourcing	It is our policy to source our wood from suppliers that are either FSC Certified or demonstrate evidence of compliance to responsible sourcing. We maximize our production and product development to minimize wood waste. Any leftover is sent to a local company that transforms the wood chips into highly efficient clean-burning wood pellets.				
Finishes	We recycle and reuse our finishes, there is no waste from start to finish, part of our zero-waste policy.				
Care and maintenance	A vacuum attachment will remove any dust. Natural oil can be reapplied to enhance the color of the wood.				
Installation and performance	Glue and nail installation. Do not install over material other than plywood and drywall. Environmental conditions such as exposure to light and fluctuation in temperature and humidity will greatly affect product performance from initial installation throughout its life. Refer to our installation instructions, install video and warranty for proper steps to a successful install and ensure the lifelong performance of your Odyssey wall.				
Storage	Leave the box flat on the floor in its original wrapping until installation in the room it is to be installed and where the ambient humidity ranges from 35% to 55% before, during and after installation.				
Glue	We recommend the use of a water based polyurethane glue.				
Sampling	Order online or contact your rep.				
Manufacturer	100% Canadian made.				




Woodwerx

TECHNICAL DATA

ATELIER

Tessere

White Oak, Walnut

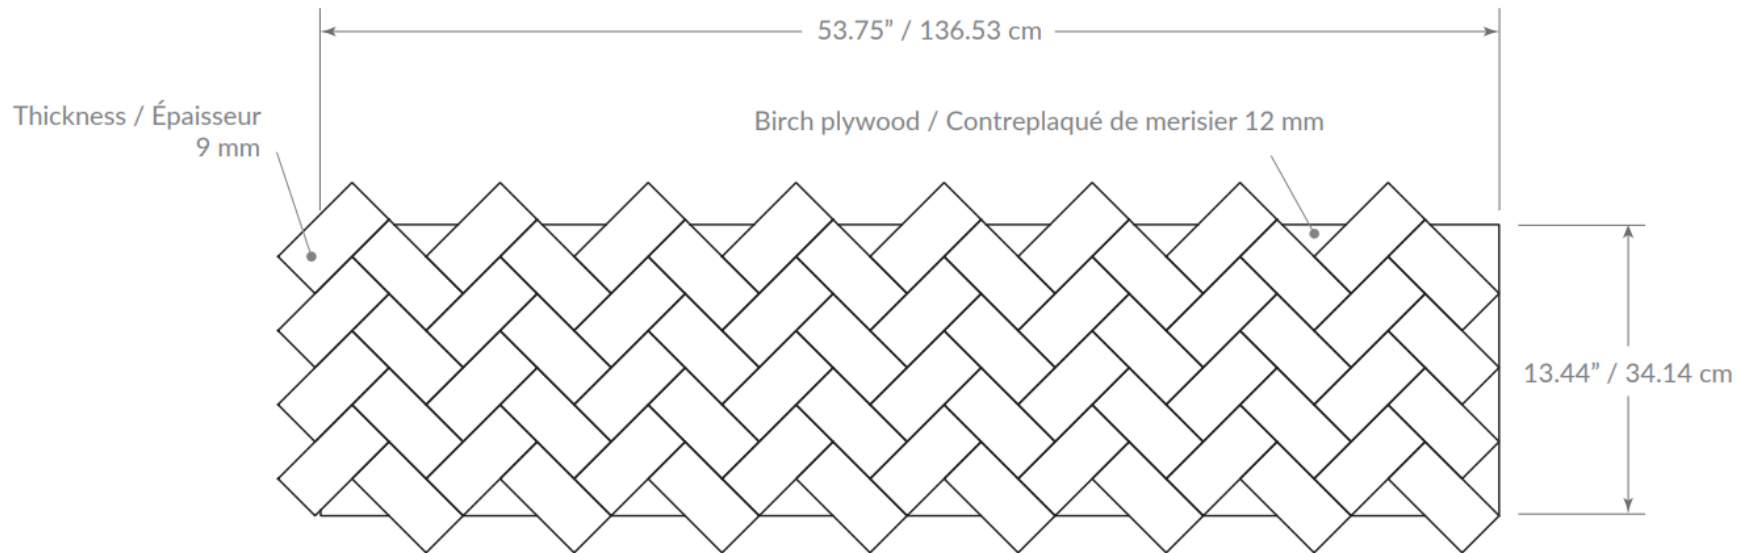

OdysseyWallcoverings.com