



Woodwerx

CAVALLI & BRAQUE WALL PANEL INSTALLATION INSTRUCTIONS

PRECAUTIONS

Always wear work gloves and safety glasses when cutting product.



TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft² or 10 m²)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.


**Do not install
over material other than
drywall or plywood.**

MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

FIRST, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

STEP 1: If you are using mouldings mark required space around the perimeter of installation area.

STEP 2: Cut the excess wood to be straight with the backing.

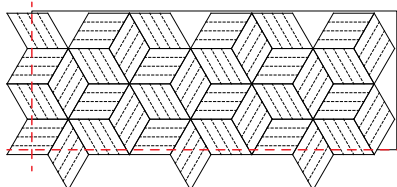


STEP 3:


A On back of panel, apply a line of 100% polyurethane glue (1/2" (1.3 cm) from the edge) and an X inside the rectangle.




B Apply glue on exposed backing.

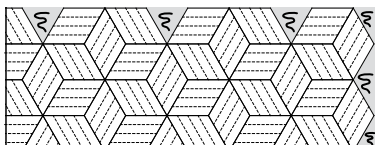

STEP 4: Position first panel at lower left of wall.
If using mouldings, position in area designated in Step 1.

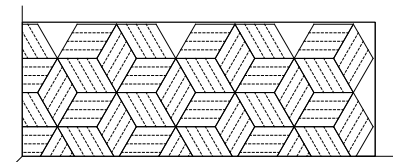


STEP 5: Nail panel in place with #23 gauge nails on the exposed backing and on the hollow part of the wood at the bottom.

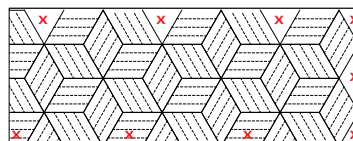

STEP 6: Installation of subsequent panels.

- Cut the excess of the wood at the bottom of the wall panel.
- Repeat step 3.
- Insert panel B into panel A.
- Repeat step 5.

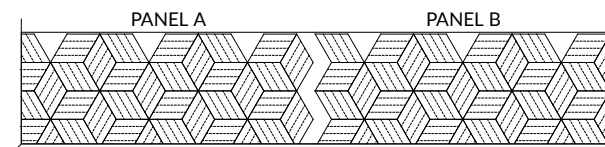

STEP 7: End row / Cut any excess of wall panel flush with edge of wall.

STEP 8: Start a new row / Use remaining piece from previous row making sure the pattern aligns or use a new piece. Repeat Step 3 and 5.

STEP 9: Last row / Cut panels of last row lengthwise to fit available space. If required, allow enough space for the moulding.

STEP 10: Insert moulding in previously designated area if required.

NOTE: If wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

Manufacturer guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%. Failure to comply with installation instructions shall void the application of the Warranty.

PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.

