



# Woodwerx

## ACOUSTIC | ONLINE WALL PANEL INSTALLATION INSTRUCTIONS

### PRECAUTIONS



This products contains stone wool.  
Use goggles, gloves, mask and long sleeves for protection.

### TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup> or 10 m<sup>2</sup>)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.

**Do not install over material other than drywall or plywood.**

### MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

**FIRST**, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

**STEP 1:** If you are using moldings, mark required space around the perimeter of installation area.

#### STEP 2:

On the back of the wall panel, apply a line of 100% polyurethane glue on all the edges and between the rectangles on the MDF frame and X's in the 3 rectangles.




### FOR CEILING INSTALLATION:

Apply a fast bonding polyurethane glue on all the surface using a notched trowel and use more nails and a T-brace to hold the panels in place till the glue sets.

#### STEP 3:


Position first panel vertically at bottom right. Make sure each panel and each column is level.

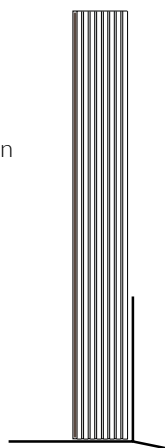

#### STEP 4:

Nail panel in place with #23 gauge finish nails in the MDF frames on the edges

\* Nailing in the membrane will damage the wall panel. Be careful to nail in the MDF frame only.



#### STEP 5: → Installation of next panels


- Repeat Step 2.
- Set panel **B** against **A**.
- Repeat Step 4.

#### STEP 6: End a column

Cut any excess of wall panel flush with top of wall.

#### STEP 7: Start a new column

Use remaining piece of previous column. Repeat Step 2 and 4.

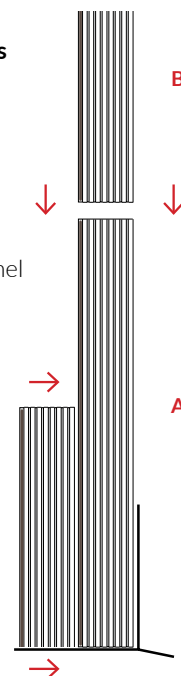

#### STEP 8: Last column

Cut panel on the left to fit available space.

\* **Handle with care when making cuts to the wall panel so as not to damage the membrane on the surface.**

**NOTE:** if wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

Manufacturer guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

**PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.**

