



# Woodwerx

## TAMBOUR & FONIC FLEX INSTALLATION INSTRUCTIONS

### PRECAUTIONS



Always wear work gloves, safety glasses and mask when cutting this product.

By installing this product, you confirm that you have consulted the installation instructions and acknowledge your approval of the product and its warranty.

### TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup>)
- Caulking gun
- Miter saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer
- #23 gauge finish nails
- Stepladder

**WALL PANELS MUST BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING.**

### CEILING APPLICATIONS:

Special glues must be specified by the onsite engineer or architect with the use of #18 gauge nails and installed by a licensed contractor or carpenter. Structural weight limitations need to be considered.

*Ceiling applications are not covered by the warranty.*

**Do not install over material other than drywall or plywood.**

### MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

**FIRST**, using a level, leave a 1/8" gap and draw a line on the left against the wall where the first wall panel will be installed.

**\*We strongly recommend painting the substrate black to prevent visible gaps should the wood slats expand due to temperature fluctuations.**

### STEP 1:

Cut the wall panel to the required length, if necessary, using a miter saw.

### STEP 2:


Apply construction glue on the back of the wall panel on every wood slats without the double-faced tape.



### STEP 3:

Remove the protective film from the double-faced tape.

**\*\*The double-faced tape serves to hold the wall panel in place during the installation process. It is not intended to provide long-term support or act as a permanent bonding method for the installation.**



### STEP 4:

Start by aligning the first panel along the leveled line that you marked earlier. This line serves as your guide for the entire installation, ensuring the panels are level and evenly spaced. Gently press the wood slat on the left side of the panel into place and roll the panel into position, being mindful to keep it aligned straight as you do so.





**\* Once positioned on the wall, the panel will not be movable.**

### STEP 5:

Nail each slat at an angle at 1" from the top and bottom and at approximately every 18" in between.

**x = #23**

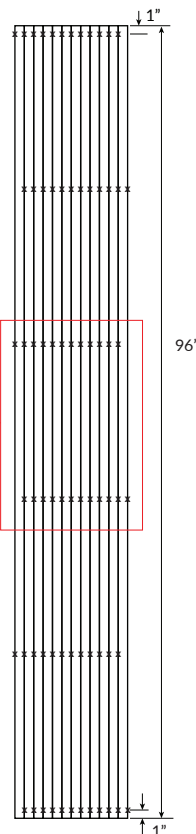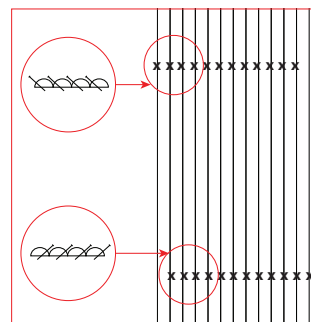

### STEP 6:

#### Installation of subsequent panels:

Repeat step 1, 2 and 3, align against the installed wall panel and gently roll into place, repeat step 5 and so forth.

Manufacturer guarantees the conformity of its products when they are installed according to the installation instructions and maintained in an environment where the ambient humidity ranges between 35% and 55%. Failure to comply with the installation instructions shall void the application of the Warranty.

**PRIOR TO INSTALLATION, PLACE CARTONS IN THEIR ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.**



[OdysseyWallcoverings.com](http://OdysseyWallcoverings.com)

